




www.acrn.fr

ACRN

Quality Control Machine
Industry & Packaging

GRIPPING WITH V-JAWS

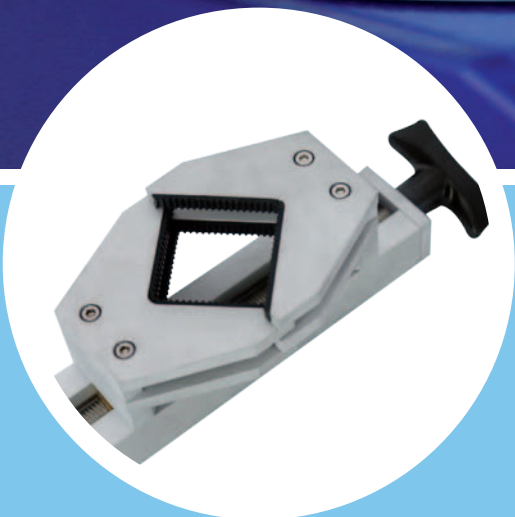

**ALLOW TO
MAINTAIN OBJECTS
WITHOUT DISTORTING THEM**

GRIPPING WITH V-JAWS

ALLOW TO MAINTAIN OBJECTS WITHOUT DISTORTING THEM

FUNCTION

The gripping in concentric V **allow to maintain objects without distorting them**. Rubber bands avoid **marking the sample to be tested**.

The tightening is ensured by a straight and parallel movement of the V-jaws.

They can be used on all manual or motorized ACRN torquemeters.

Very versatile, they can also be installed on traction bench to hold objects for traction or compression tests.



THE EXISTING GRIPPING



● Mini gripping V-jaws



● Small gripping V-jaws



● Large gripping V-jaws

The extra-large gripping V-jaws is available only on request

TECHNICAL INFORMATION

Features	MINI GRIPPING	SMALL GRIPPING	BIG GRIPPING	VERY LARGE GRIPPING
Gripping Mini-Maxi	3 to 40 mm	20 to 45 mm	3 to 85 mm	25 to 140 mm
Number of V-jaws	3	2	4	4
Gripping height Ht	29 mm	59 mm	82 mm	82 mm
Tightening height Hs	20 mm	30 mm	52 mm	52 mm
Clutter out of everything L x lg	130 mm x 30 mm	185 mm x 80 mm	250 mm x 100 mm	330 mm X 100 mm
Angle of standard V-jaws's	90°	90°	90°	90°



USE CASES:

With its different capacities the gripping V-jaws can be used with **bottles** (e.g. water, soda...), **vials** (round or complex in shape) as well as **rectangular or square containers**.

It is generally used in the fields of agri-food, pharmaceuticals and cosmetics, but also used in other industries.



DIAMETER OF TRAYS

Diameter of trays	110 mm	140 mm	180 mm	180 mm
Use without trays with a traction/compression stand	no	yes	yes	yes
Reference	88 000 15	88 000 16	88 000 17	88 001 97

